


UNIVERSAL MOUNTING BRACKET

LZR-WIDESCAN

DESCRIPTION - BESCHREIBUNG

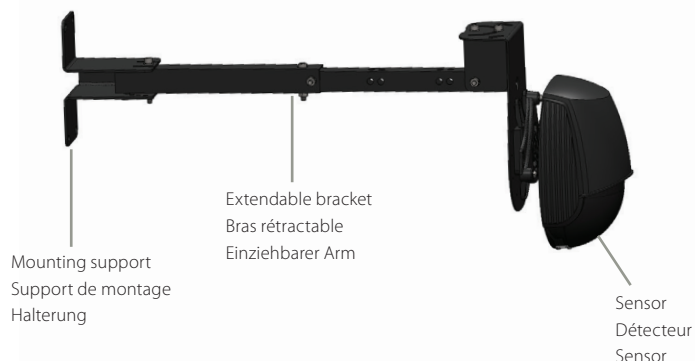

TOOLS - OUTILS - WERKZEUGE






Self drilling screws
Vis autoforeuses
Bohrschrauben
- DIN 7504 ST6, 3X32 (x4)
- DIN 7504 ST4, 8X16 (x3)






Allen key 6 mm + screwdriver (not included)
Clé Allen 6 mm + tournevis (non inclus)
Inbusschlüssel 6 mm + Drehschrauber (nicht enthalten)

OBSTACLE - HINDERNIS

In case there is an obstacle on top of the door (door drum, ventilation system, etc.), for low ceilings or high installations.
S'il y a un obstacle sur le dessus de la porte (enrouleur, système de ventilation, etc.), pour les plafonds bas ou les installations hautes.
Im Falle eines Hindernisses an der Tür Oberseite (Rollsystem, Lüftungssystem, usw.), für niedrige Decken oder bei hoher Montage.

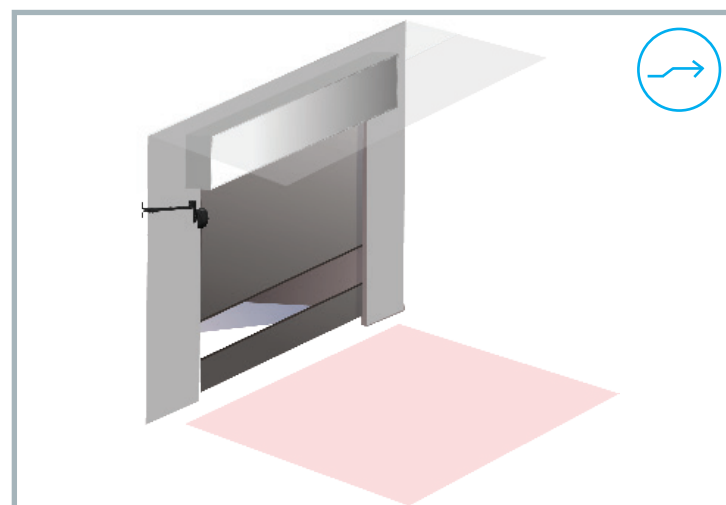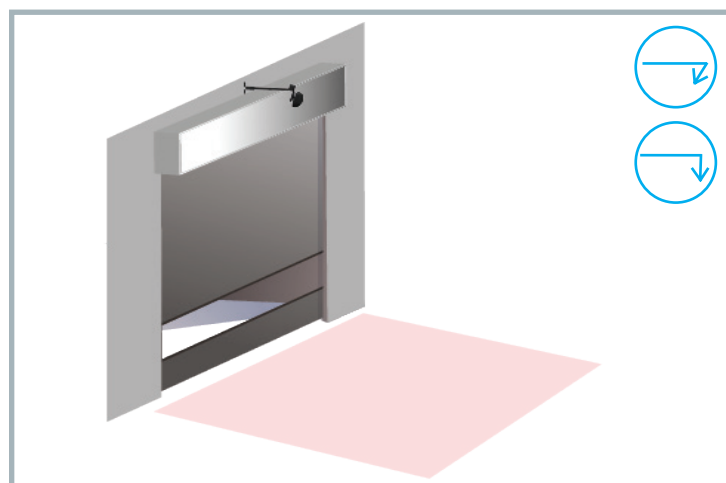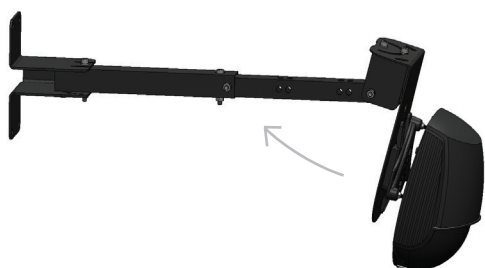

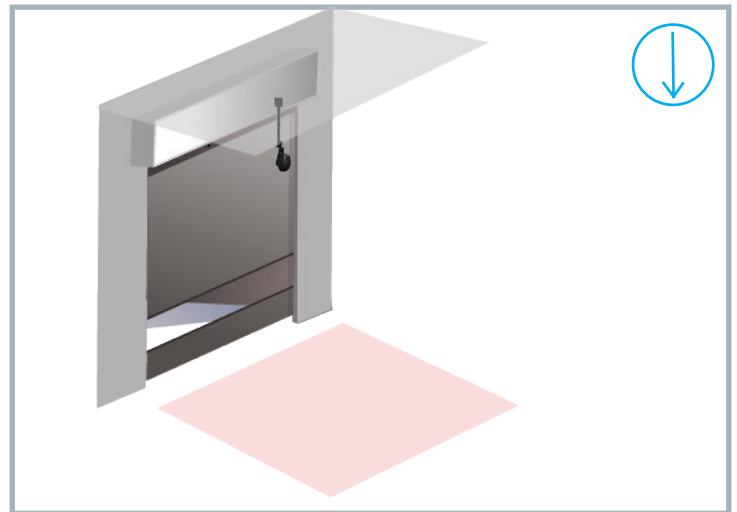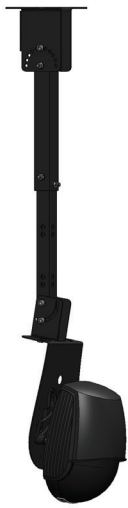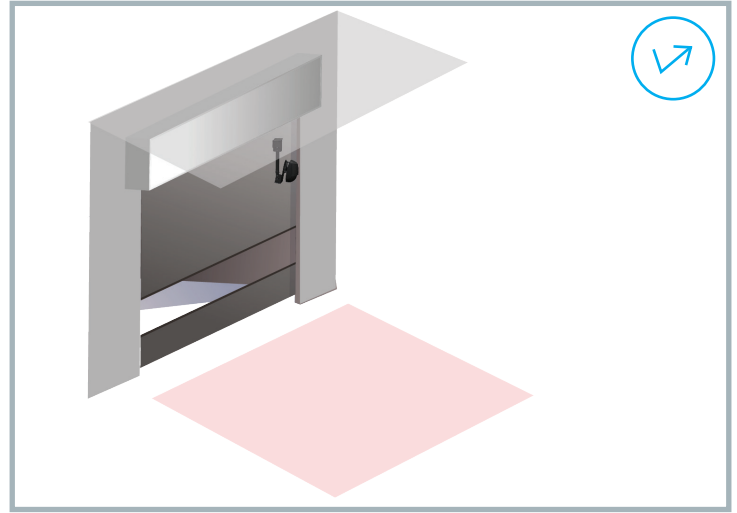

OTHER - AUTRE - ANDERE

For doors placed under a balustrade, balcony or stairwell.
 Pour les portes placées sous une balustrade, un balcon ou une cage d'escalier.
 Für Tore unter Balustraden, Balkonen oder Treppenhäuser.

